




BARN OWL BOX


INSTRUCTIONS FOR ASSEMBLY

PARTS LIST:


TOP  
↑

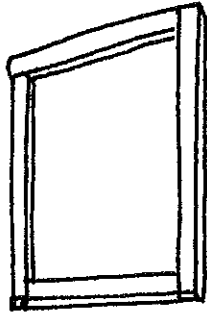

16" x 23.5"  
2 SIDES

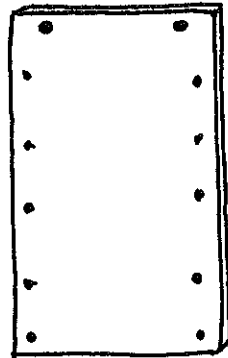

16" x 26"  
1 BACK

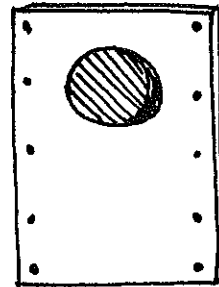


16" x 20.5"  
1 FRONT


TTTTTTTTTTTT  
TTTTTTTTTTTT  
TTTTTTTT

TWENTYSIX PLUS  
1" GALVANIZED  
SCREWS

FRONT  
↑

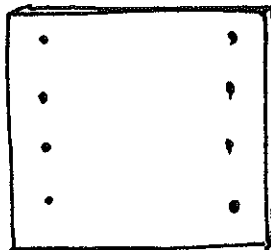

20" x 18.5"  
1 TOP

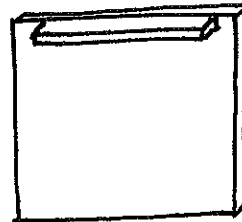

16" x 14.5"  
1 BOTTOM


TOOLS FOR ASSEMBLY

1. PHILIPS HEAD SCREWDRIVER
2. FLAT SURFACE TO WORK ON
3. DIRECTIONS



INSTRUCTIONS FOR ASSEMBLY


① ATTACH 2 SIDES TO BACK. THIS STEP USES 8 SCREWS. PUT CORNER SCREWS IN FIRST TO KEEP THE BOX SQUARE. LONG PART OF SIDE ATTACHES TO THE BACK.

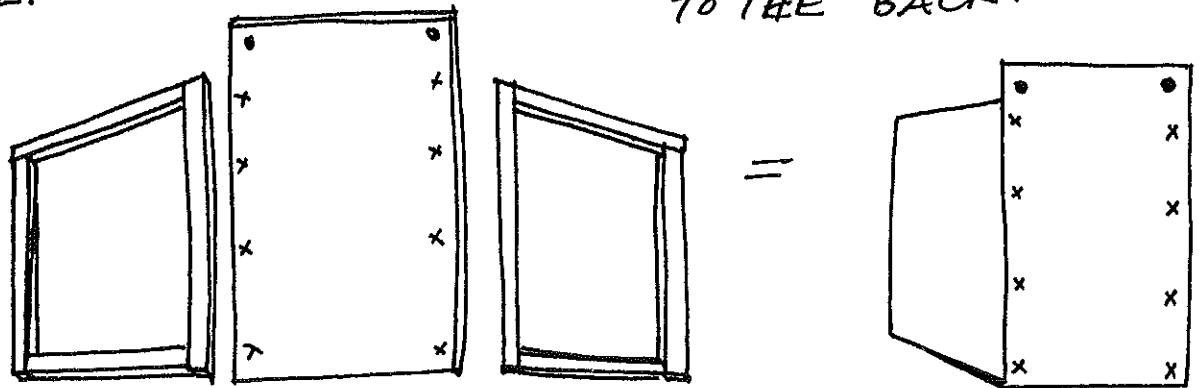


+ TTTT TTTT

BACK VIEW


② ATTACH FRONT TO BACK & SIDES. THIS STEP REQUIRES 10 SCREWS. ATTACH THE FOUR CORNER SCREWS FIRST.

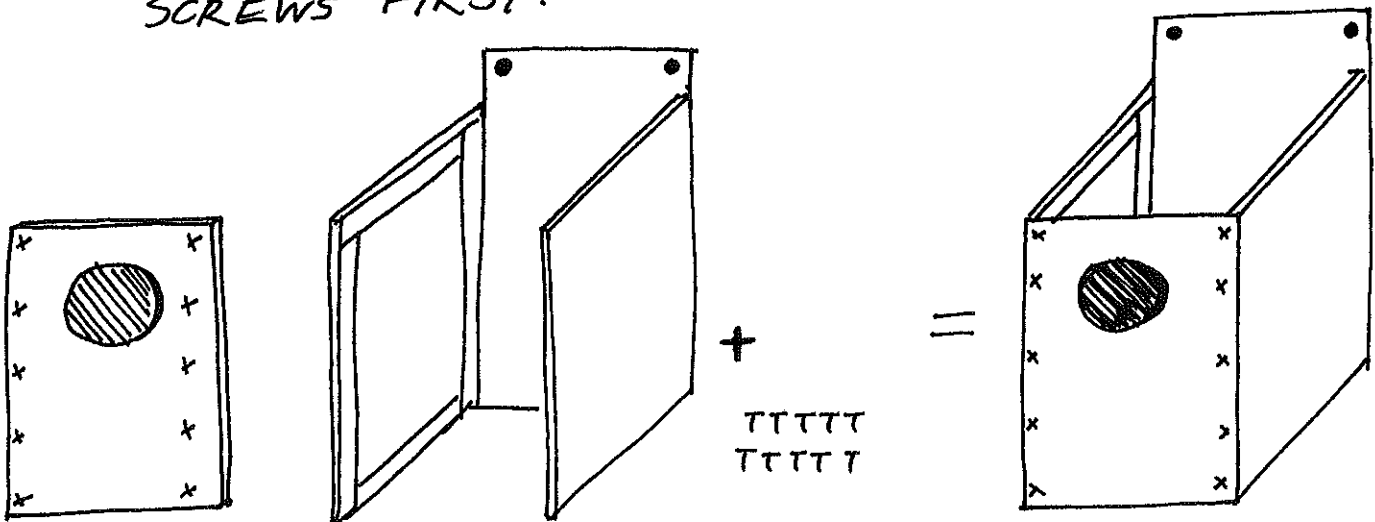

+ TTTTT  
TTTTT

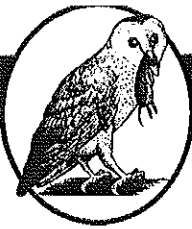

③ ATTACH TOP OF NESTING BOX. THIS STEP USES 8 SCREWS. DO CORNERS FIRST IN ORDER TO SQUARE BOX.

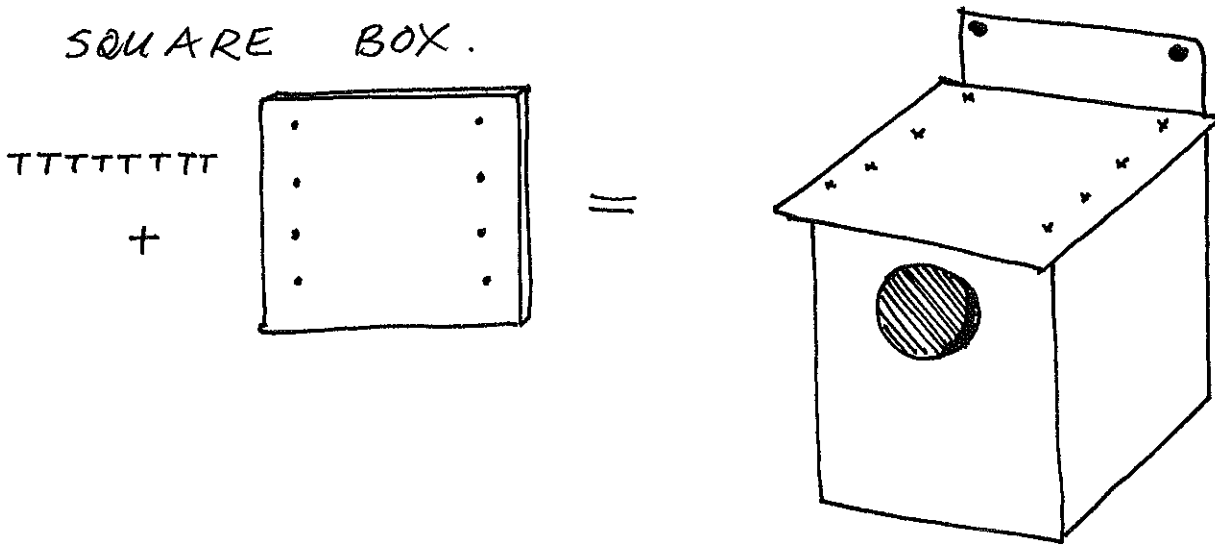

④ ATTACH BOTTOM TO NEST BOX. THIS STEP REQUIRES 8 SCREWS. FLIP BOX TO BACKSIDE. AGAIN, DO CORNERS FIRST.

